


76723 HAMILTON PART BRNCES ASSEMBLY DIAGRAM

Prior to assembly it is recommended to sand part using 400-600 grit sand paper
Use medium/ thick ACC glue or wood glue (such as Elmer's yellow glue) to bond parts together

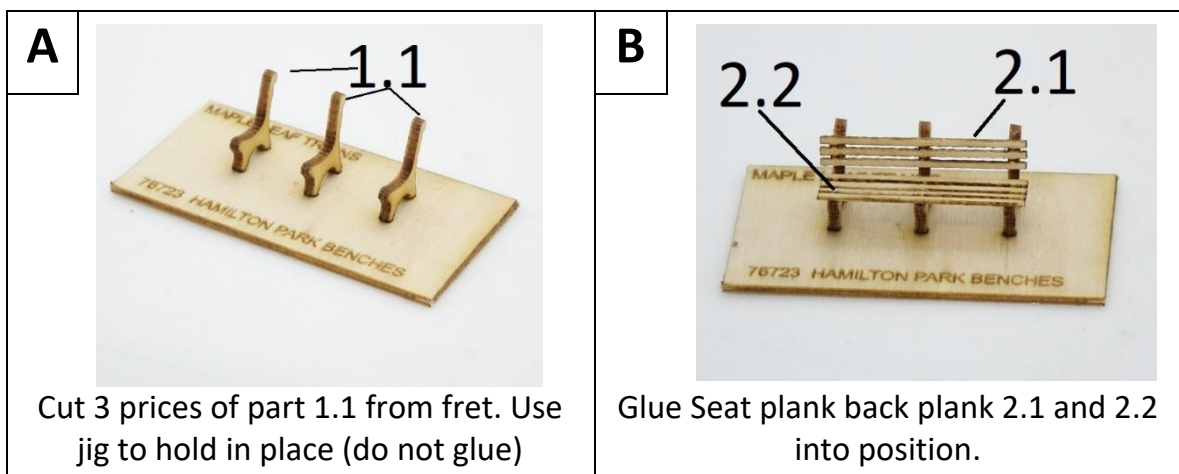

And... You're done!