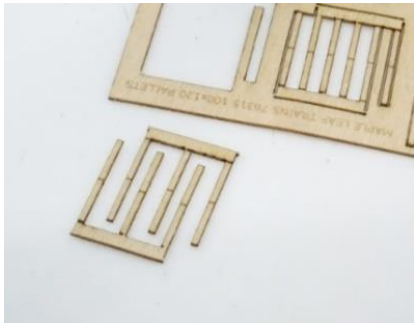
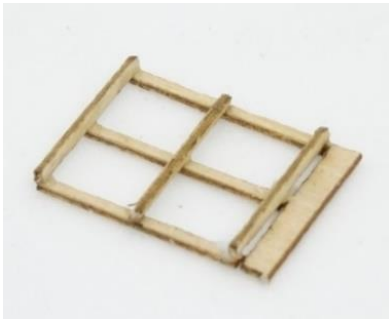
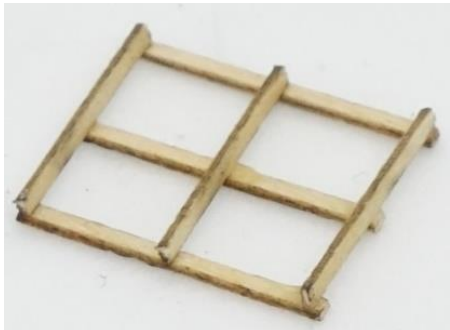
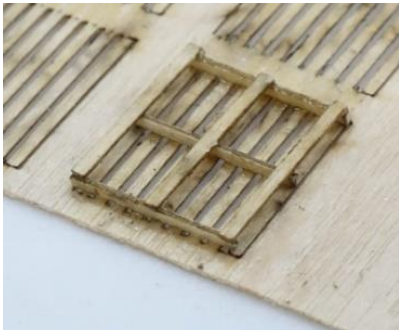


76316 Pallets 48 x 48 ASSEMBLY DIAGRAM

Thank you for purchasing Maple Leaf Trains Laser cut kit

- Prior to assembly it is recommended to sand part using 400-600 grit sand paper
- Use thin ACC glue to bond parts together
- Use a sharp hobby knife when remove parts from the carrier sheets.

<p>A</p>  <p>Remove the 12 Bottom Deck Boards from laser cut sheet. (Part 1.1)</p>	<p>B</p>  <p>Glue 3 Stringers (Part 2.1) to Bottom Deck Boards. Make sure to cut Stringers using sharp knife. Let dry completely.</p>
--	--

<p>C</p>  <p>Cut Bottom Deck Boards holder</p>	<p>D</p>  <p>Carefully glue the assembly to the bottom of Top Deck Boards (Part1.2)</p>
--	--

Next, Cut the Top deck board from sheet and now you have a brand you pallets! Paint, weather or stain your new pallets!