
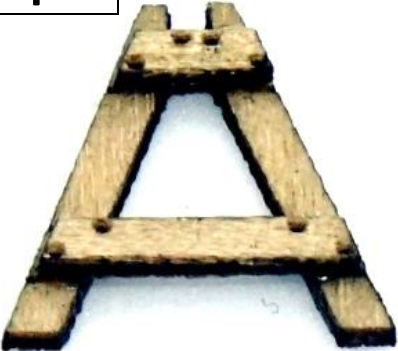


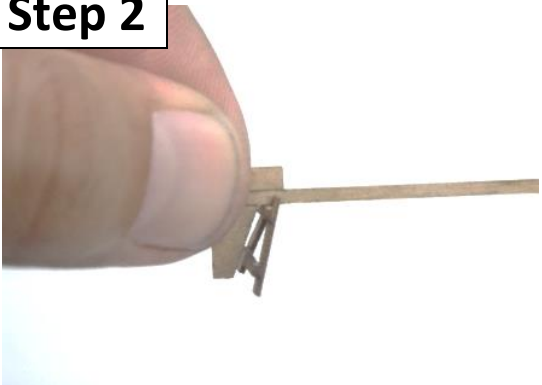

76752 ROAD BARRICADES ASSEMBLY DIAGRAM

Thank you for purchasing Maple Leaf Trains product

Prior to assembly: identify the parts, cut from sheet and file any connecting tabs using sand 400/ 600 grit sand paper.

Use either medium to thick ACC glue or modelers wood glue to bond parts together.

Step 1  Parts 1-2 (Road Barricades Base), 1-3 and 1-4, bracing large (bottom) and small (upper)	Step 2  Glue base to bars (parts 1-6, 1-7, 1-8), spacer (part 1-1) will serve as guide for accurate position and angle.
Step 3  Part 1-5 (4 at each side, 8 in total)	Step 4  Paint and weather! Enjoy your new Road Barricades